
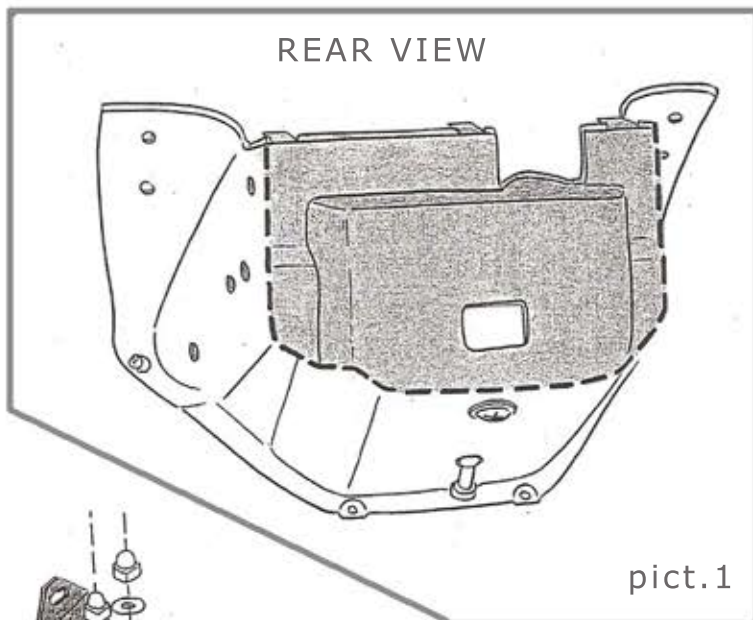


MOUNTING PROCEDURE**KIT UNIVERSAL HEADLIGHT****N7000****KIT**


- X1. FIBERGLASS WINDSHIELD/SCREEN+HEADLIGHT
- X2. BRACKET
- X6. BLIND NUT DIAMETER 6
- X4. WASHER DIAMETER 6
- X3. LARGE WASHER DIAMETER 6
- X2. RUBBER WASHER
- X6. TBL 6X10
- X1. TBL 6X35
- X1. RUBBER TUBE (2 CM)
- X4. "ROUND HEAD" SCREW 8X16

WWW.BARRACUDAMOTO.COM**REAR VIEW**

pict.1

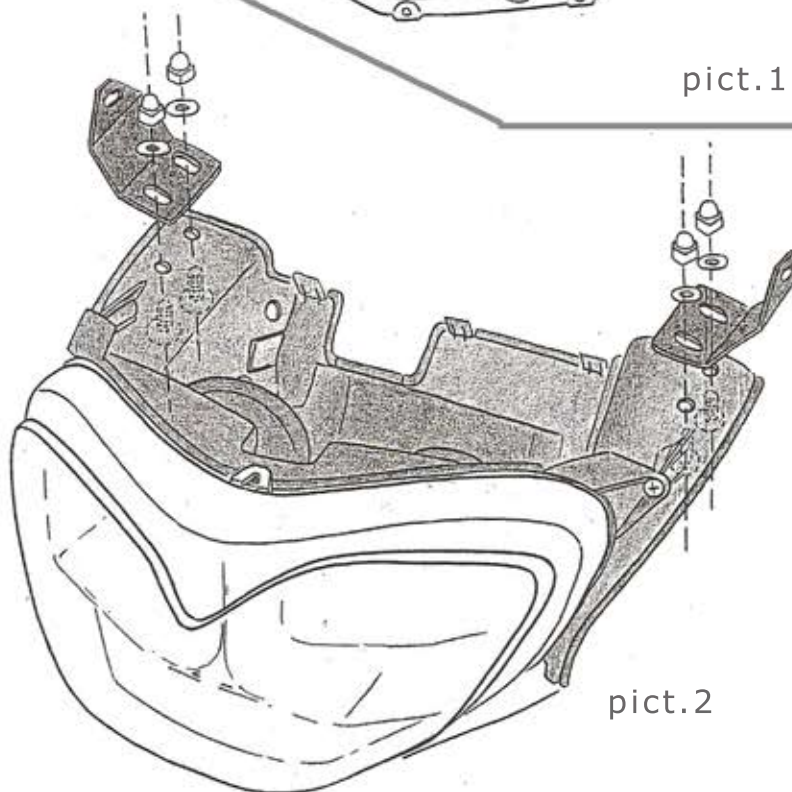

pict.2

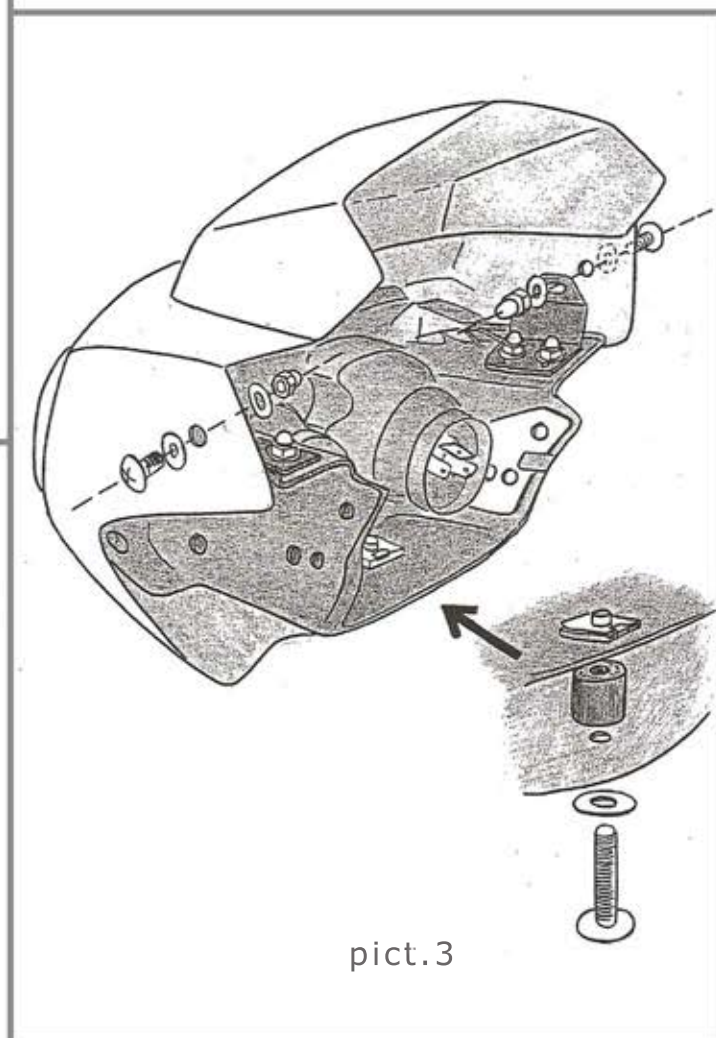

pict.3

REMOVE THE ORIGINAL HEADLIGHT FROM THE MOTORBIKE. WE ADVISE TO CUT THE REAR OF BARRACUDA HEADLIGHT FOLLOWING THE DASHED LINE TO HAVE A BETTER BUILT-IN ON THE MOTORBIKE, TAKE A LOOK AT THE PICTURE 1; APPLY THE 2 BRACKETS ON THE HEADLIGHT LIKE SHOWN ON THE PICTURE 2 WITHOUT LOCK. BUILT-IN THE HEADLIGHT IN THE BARRACUDA WINDSHIELD/SCREEN COVER FIXING IT WITH THE SCREWS LIKE IN THE PICTURE 3; USE THE RUBBER THICKNESS IN THE BOTTOM (LOOK AT THE PICTURE) AND THE TWO RUBBER WASHERS BETWEEN THE BRACKET AND THE WINDSHIELD/SCREEN TO ABSORB THE VIBRATIONS. FIND THE IDEAL POSITION OF THE BRACKETS ON THE WINDSHIELD/SCREEN AND LOCK. IN THE END PUT THE WINDSHIELD/SCREEN ON THE MOTORBIKE APPLYING THE TWO IRON BRACKETS FROM INSIDE TO MAKE EASY THE FIX; IT IS POSSIBLE TO APPLY THE INDICATORS/ARROWS INTO THE REMAINING HOLES.