

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
 ANCLAJE ESPECÍFICO PARA

# DUCATI MONSTER 696

'08 - '09

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
 INSTRUCCIONES DE MONTAJE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1



**SUPPORTO**  
 SUPPORT  
 SUPPORT  
 HALTERUNG  
 SOPORTE

**Q.TY n.1**

2



**DISTANZIALE Ø12x12mm**  
**Foro Ø8,5mm, V446**  
 SPACER  
 ENTRETÔISE  
 DISTANZSTÜCK  
 DISTANCIADOR

**Q.TY n.2**

3



**DISTANZIALE Ø12x9mm**  
**Foro Ø8,5mm, V729**  
 SPACER  
 ENTRETÔISE  
 DISTANZSTÜCK  
 DISTANCIADOR

**Q.TY n.2**

7



**RONDELLA IN GOMMA 16x2 Ø6**  
 RUBBER WASHER  
 RONDELLE EN CAOUTCHOUC  
 GUMMI SCHEIBE  
 ARANDELA DE GOMA

**Q.TY n.8**


8



**DADO A.B. M6**  
 FLANGIATO  
 BOLT M6  
 ECROU M6  
 MUTTER M6  
 TUERCA M6

**Q.TY n.4**

9

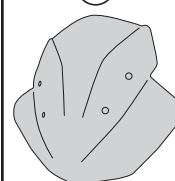




**Q.TY n.1**

10



**RONDELLA Ø8x14mm**  
 WASHER Ø8x14mm  
 RONDELLE Ø8x14mm  
 SCHEIBE Ø8x14mm  
 ARANDELA Ø8x14mm

**Q.TY n.4**

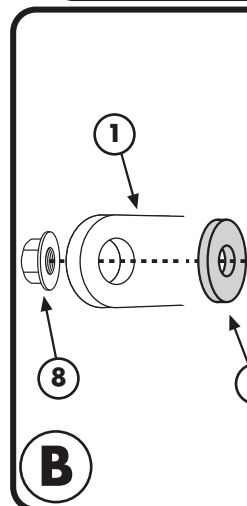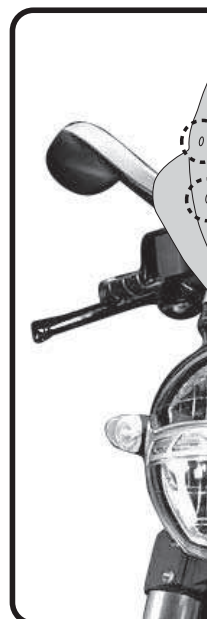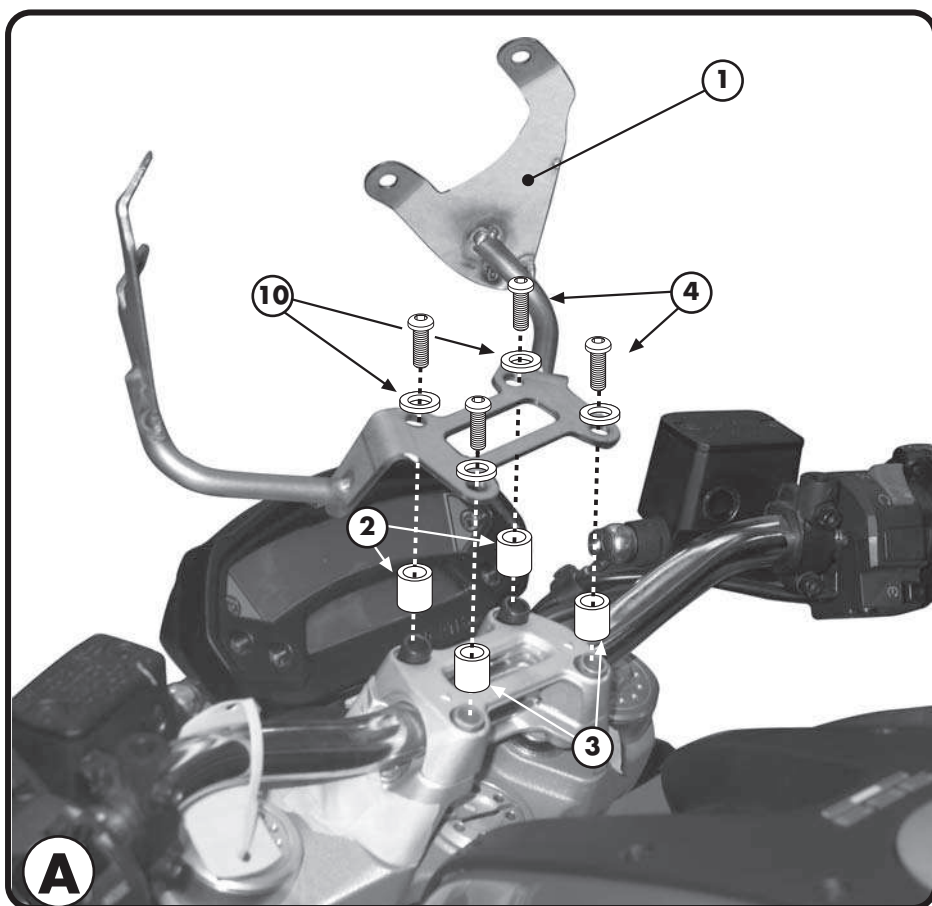

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR  
KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR  
ANCLAJE ESPECÍFICO PARA

# DUCATI MONSTER 696

'08 - '09

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

## I ISTRUZIONI DI MONTAGGIO

1. MONTARE IL SUPPORTO NUMERO 1 COME INDICATO IN F
2. FISSARE IL CUPOLINO SEGUENDO IL PROCEDIMENTO DI FIC
3. ULTIMARE IL MONTAGGIO VERIFICANDO CHE TUTTE LE VITI S

## GB MOUNTING INSTRUCTIONS

1. REMOVE THE BOLTS FROM THE HANDLEBAR RISERS.
2. PLACE THE WINDSCREEN SUPPORT (ITEM N°1) INTO POSITION AND INSTALL AS SHOWN IN PICTURE A;
3. ATTACH THE WINDSCREEN FOLLOWING THE PROCEEDURE SHOWN IN PICTURE AND FIGURE B;
4. MAKE SURE THAT ALL THE NUTS AND BOLTS ARE TIGHTENED APPROPRIATELY (BOLTS M6=9.6Nm - BOLTS M8=23Nm).

## F INSTRUCTIONS DE MONTAGE

1. MONTER LE SUPPORT N°1, COMME INDIQUE EN PHOTO A;
2. FIXER LE PARE-BRISE EN SUIVANT LE PROCEDE EN PHOTO B;
3. TÉRMINER LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS (VIS M6=9,6Nm - VIS M8=23Nm).

## D

1. MONT
- GEZEI
2. MONT
- MON
3. ZULET
- (SCHR
- M8=2

## ES INSTRUCCIONES DE MONTAJE

1. MONTAR EL SOPORTE NÚMERO 1 COMO MUESTRA LA ILUSTRACIÓN "A";
2. FIJAR LA CÚPULA SIGUIENDO EL PROCEDIMIENTO COMO SE MUESTRA EN LA ILUSTRACIÓN "B";
3. COMPLETAR EL MONTAJE VERIFICANDO QUE TODOS LOS TORNILLOS ESTEN BIEN APRETADOS (TORNILLOS M6=9,6NM - TORNILLOS