

ATTACCHI SPECIFICI PER - SPECIFIC FITTING KIT FOR
 KIT DE MONTAGE SPECIFIQUE POUR - SPEZIFISCHER MONTAGEKIT FÜR
 ANLAJE ESPECÍFICO PARA

KYMCO PEOPLE S 2005-2009

50/125/200cc

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

1

Q.TY n.-

2

VITE TE M8x40mm
 SCREW M8x40mm
 VIS M8x40mm
 SCHRAUBE M8x40mm
 TORNILLO M8x40mm

Q.TY n.2

3

VITE TBEI M6x25 nera
 SCREW M6x25 black
 VIS M6x25 noire
 SCHRAUBE M6x25 schwarz
 TORNILLO M6x25 negra

Q.TY n.4

11


FASCETTA
 CLAMP
 COLLIER
 SCHELLE
 ABRAZADERA

Q.TY n.2

12

COMPONENTI ORIGINALI
 ORIGINAL PARTS
 PARTIES ORIGINALES
 ORIGINAL BAUTEILE
 COMPONENTES ORIGINALES

Q.TY n.-

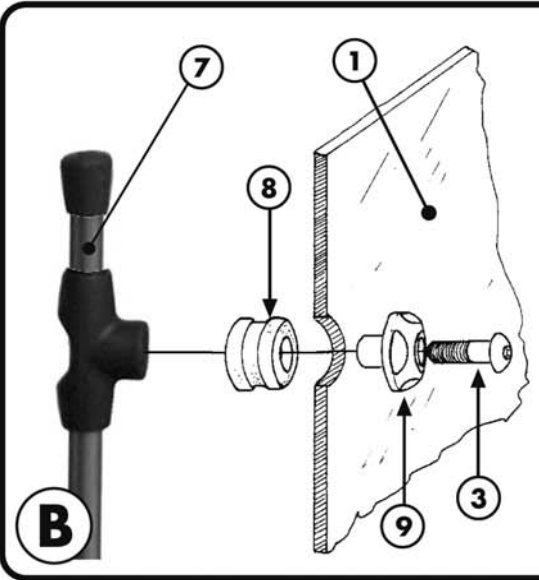

4

RONDELLA Ø8x14mm
 WASHER Ø8x14mm
 RONDELLE Ø8x14mm
 SCHEIBE Ø8x14mm
 ARANDELA Ø8x14mm

Q.TY n.2

5

RONDELLA Ø6mm
 Nero
 WASHER Ø6mm
 RONDELLE Ø6mm
 SCHEIBE Ø6mm
 ARANDELA Ø6mm

Q.TY n.2

6

DADO A.B. M6
 Nero
 BOLT M6
 ECROU M6
 MUTTER M6
 TUERCA M6

Q.TY n.2

7

SUPPORTO
 SUPPORT
 SUPPORT
 HALTERUNG
 SOPORTE

Q.TY n.2(Dx-5x)

8

GOMMINO Z268
 Z268 FAIRLEADER
 CHAUMARD Z268
 GUMMI Z268
 GOMA Z268

Q.TY n.4

9



BOCCOLA DI RITENZIONE VETRO
 PLASTIC BUSH
 DOUILLE PLASTIQUE
 PLASTIK BUCHSE
 CASQUILLO

Q.TY n.4

10

VITE TCEI M6x20mm
 SCREW
 VIS
 SCHRAUBE
 TORNILLO

Q.TY n.2

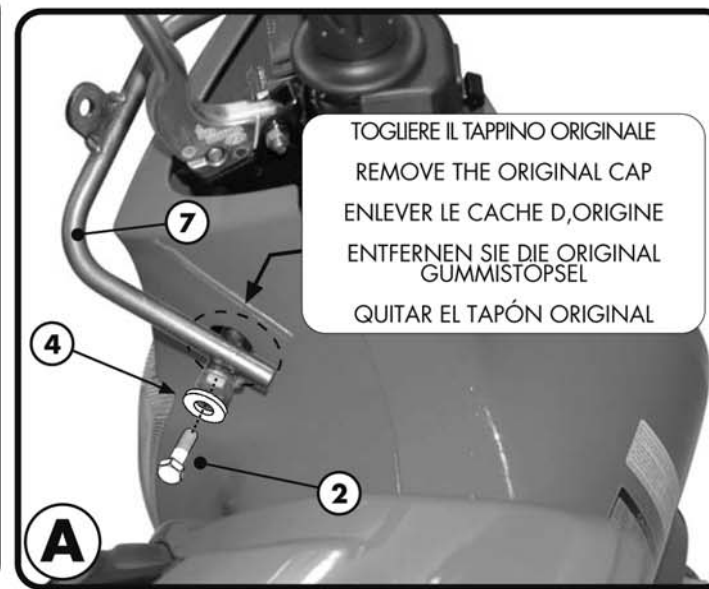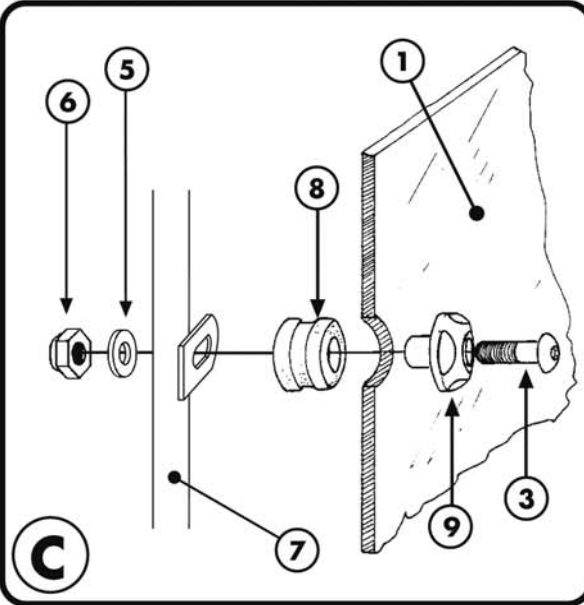

TOGLIERE IL TAPPINO ORIGINALE
 REMOVE THE ORIGINAL CAP
 ENLEVER LE CACHE D'ORIGINE
 ENTFERNEN SIE DIE ORIGINAL GUMMISTOPSEL
 QUITAR EL TAPÓN ORIGINAL

