









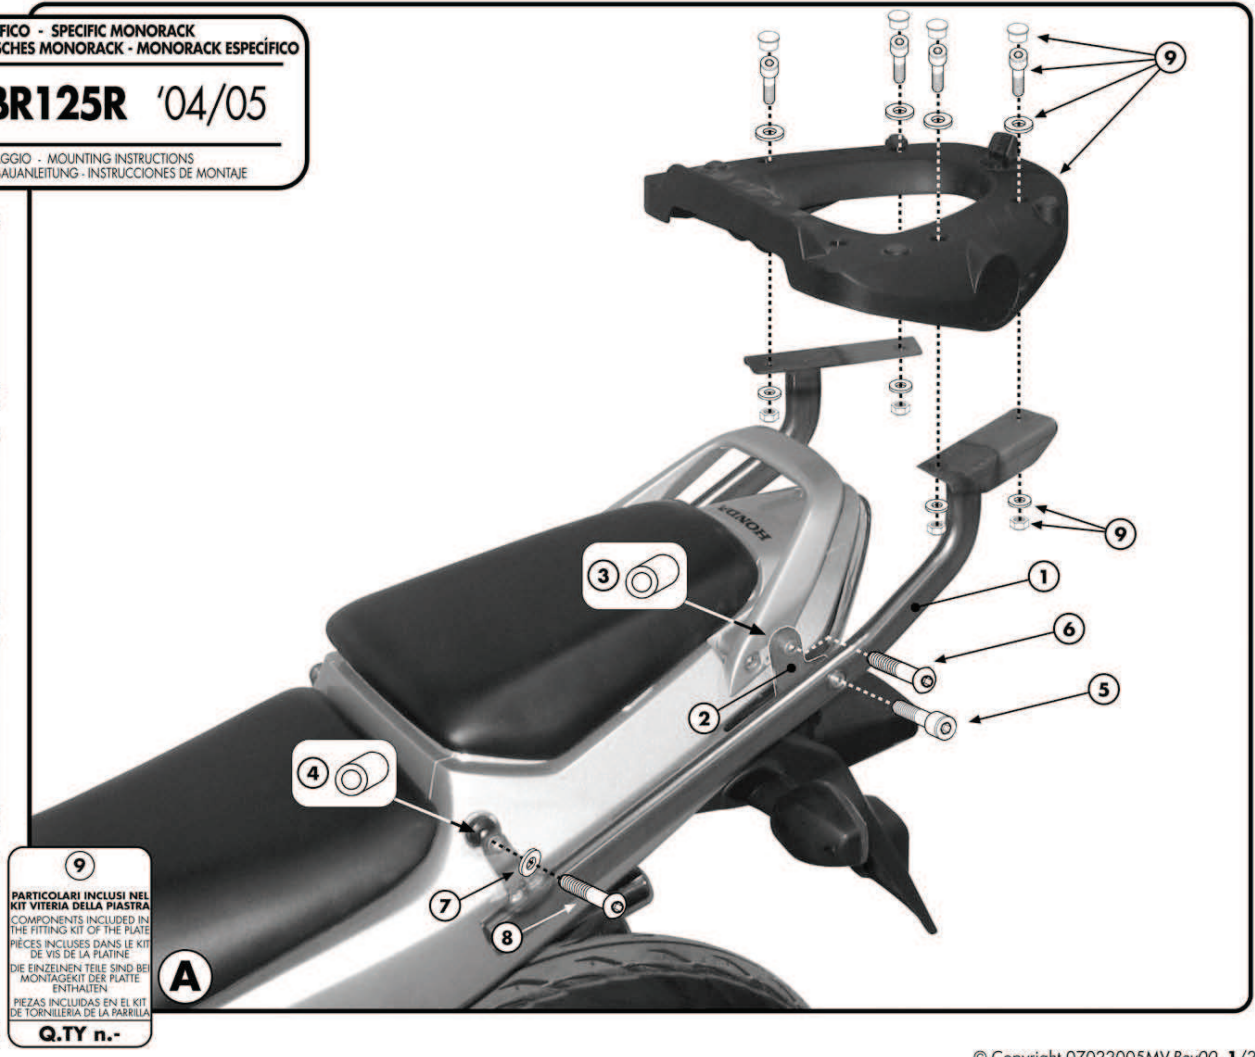
262FZ-KZ262

MONORACK SPECIFICO - SPECIFIC MONORACK
 MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

HONDA CBR125R '04/05

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

- | | |
|---|--|
| <p>1</p>  <p>SUPPORTO
SUPPORT
SUPPORT
HALTERUNG
SOPORTE</p> <p>Q.TY n.2(Dx-Sx)</p> | <p>2</p>  <p>SUPPORTO
SUPPORT
SUPPORT
HALTERUNG
SOPORTE</p> <p>Q.TY n.2(Dx-Sx)</p> |
| <p>3</p>  <p>DISTANZIALE Ø14x16mm
Foro Ø9,5mm, V457
SPACER
ENTRETOISE
DISTRANZSTÜCK
DISTANCIADOR</p> <p>Q.TY n.2</p> | <p>4</p>  <p>DISTANZIALE Ø11x10mm
Foro Ø6,5mm, V175
SPACER
ENTRETOISE
DISTRANZSTÜCK
DISTANCIADOR</p> <p>Q.TY n.2</p> |
| <p>5</p>  <p>VITE TCEI M8x20mm
SCREW M8x20mm
VIS M8x20mm
SCHRAUBE M8x20mm
TORNILLO M8x20mm</p> <p>Q.TY n.2</p> | <p>6</p>  <p>VITE TBEI M8x60mm
SCREW M8x60mm
VIS M8x60mm
SCHRAUBE M8x60mm
TORNILLO M8x60mm</p> <p>Q.TY n.2</p> |
| <p>7</p>  <p>RONDELLA Ø6mm
WASHER Ø6mm
RONDELLE Ø6mm
SCHEIBE Ø6mm
ARANDELA Ø6mm</p> <p>Q.TY n.2</p> | <p>8</p>  <p>VITE TBEI M6x40mm
SCREW M6x40mm
VIS M6x40mm
SCHRAUBE M6x40mm
TORNILLO M6x40mm</p> <p>Q.TY n.-</p> |



MONORACK SPECIFICO - SPECIFIC MONORACK
MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO

HONDA CBR125R '04/05

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

I ISTRUZIONI DI MONTAGGIO

1. MONTARE I SUPPORTI N°1 COME INDICATO IN FOTOGRAFIA A;
2. MONTARE LA PIASTRA (NON INCLUSA) COME INDICATO IN FOTOGRAFIA; SI PRESCRIVE L'ABBINAMENTO DELLA PIASTRA MONOLOCK;
3. ULTIMARE IL MONTAGGIO CONTROLLANDO CHE TUTTE LE VITI SIANO SERRATE BENE.

GB MOUNTING INSTRUCTIONS

1. MOUNT THE SUPPORTS N° 1 AS SHOWN IN PICTURE A;
2. MOUNT THE PLATE (NOT INCLUDED) AS SHOWN IN THE PICTURE; WE RECOMMEND THAT MONOLOCK PLATES ONLY ARE USED.
3. LASTLY CHECK THAT ALL SCREWS HAVE BEEN TIGHTENED.

F INSTRUCTIONS DE MONTAGE

1. MONTER LES SUPPORTS N°1 COMME INDIQUE SUR LA PHOTO A;
2. MONTER LA PLATINE (NON INCLUSE) COMME MONTRE SUR LA PHOTO A; IL EST RECOMMANDE DE METTRE UNE PLATINE MONOLOCK (M5M);
3. FINIR LE MONTAGE EN CONTROLANT LE BON SERRAGE DE TOUTES LES VIS.

D BAUANLEITUNG

1. MONTIEREN SIE DIE HALTERUNGEN NR. 1 WIE IM BILD A BESCHRIEBEN;
2. MONTIEREN SIE DIE PLATTE (NICHT VORHANDEN) WIE IN DEM BILD GEZEIGT; WIR EMPFEHLEN DIE MONTAGE DER MONOLOCK PLATTE;
3. ZULETZT ÜBERPRÜFEN SIE, DASS ALLE SCHRAUBEN FESTGEZOGEN WURDEN.

ES

INSTRUCCIONES DE MONTAJE

1. MONTAR LOS BRAZOS MONORACK N° 1 COMO INDICA LA FOTO;
2. MONTAR LA PARRILLA MONOLOCK (NO INCLUIDA - SE VENDE POR SEPARADO) COMO INDICA LA FOTO;- INDICAMOS EL USO EXCLUSIVO DE LA PARRILLA MONOLOCK;
3. TERMINAR APRETANDO BIEN TODOS LOS TORNILLOS.