

MONORACK SPECIFICO - SPECIFIC MONORACK
 MONORACK SPECIFIQUE - SPEZIFISCHES MONORACK - MONORACK ESPECÍFICO


KAWASAKI ZZR600 '93/'02

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

Attention




- RIPASSARE IL FORO CON PUNTA Ø 8,5
- DRILL AGAIN THE HOLE WITH Ø 8,5
- REPERCER LE TROU AVEC POINT Ø 8,5

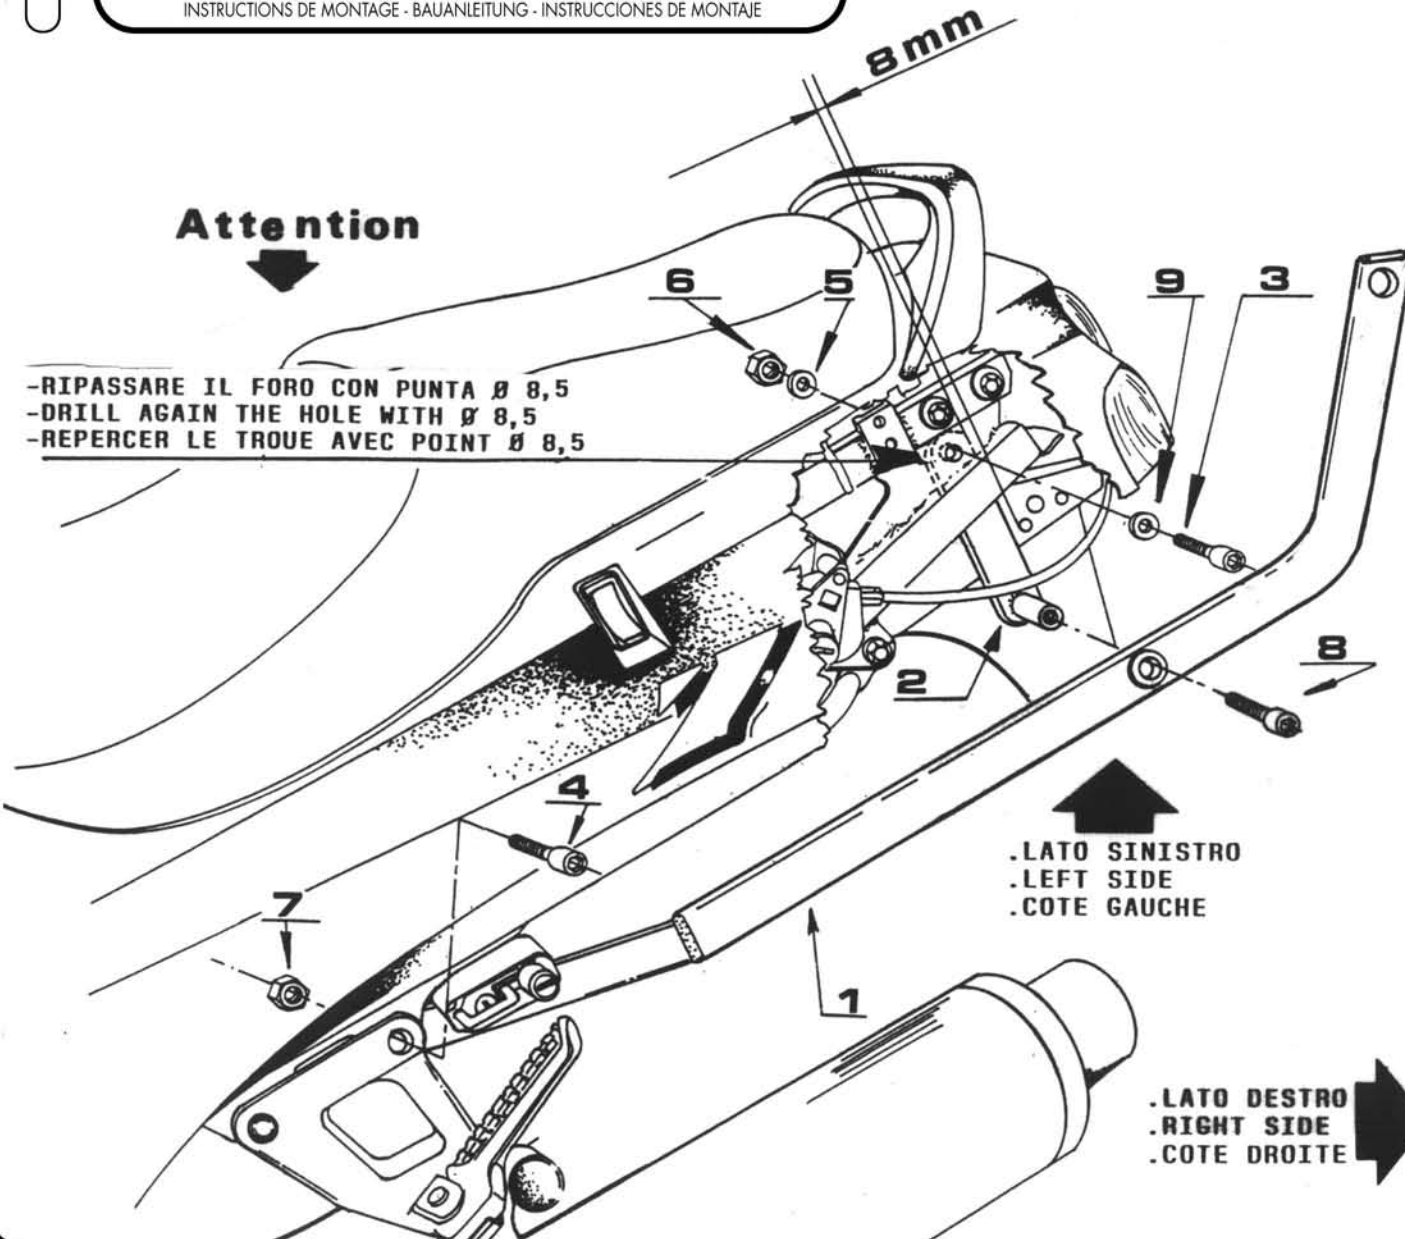

.LATO SINISTRO
 .LEFT SIDE
 .COTE GAUCHE

.LATO DESTRO
 .RIGHT SIDE
 .COTE DROITE

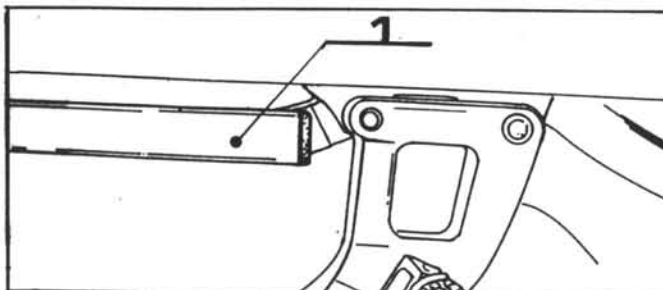

N°	DESCRIZIONE DEL KIT (KIT DESCRIPTION) (DESCRIPTION DU KIT)	QUANTITA' (QUANTITY) (QUANTITE')
1	MONORACK	2
2	SUPPORTO (SUPPORT) (SUPPORT)	2
3	VITE TCEI M 8 X 25 (SCREW M 8 X 25) (VIS M 8 X 25 6 PANS CREUX)	2
4	VITE TCEI M 8 X 30 (SCREW M 8 X 30) (VIS M 8 X 30 6 PANS CREUX)	2
5	RONDELLA Ø 8 (WASHER Ø 8) (RONDELLE Ø 8)	2
6	DADO M 8 (NUT M 8) (ECROU M 8)	2
7	DADO ORIGINALE (ORIGINAL NUT) (ECROU D'ORIGIN)	-
8	VITE TCEI M 8 X 20 (SCREW M 8 X 20) (VIS M 8 X 20 6 PANS CREUX)	2
9	RONDELLA Ø 8 X 14 (WASHER Ø 8 X 14) (RONDELLE Ø 8 X 14)	2