





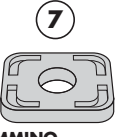








E194 - K94

PIASTRA SPECIFICA - SPECIFIC PLATE
 PLATINE SPECIFIQUE - SPEZIFISCHE PLATTE - PARRILLA ESPECÍFICA

BMW F800GS 2008

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
 INSTRUCTIONS DE MONTAGE - BAUANLEITUNG - INSTRUCCIONES DE MONTAJE

 <p>1</p> <p>SUPPORTO SUPPORT HALTERUNG SOPORTE</p> <p>Q.TY n.1</p>	 <p>2</p> <p>VITE TEF M8x60mm SCREW M8x60mm VIS M8x60mm SCHRAUBE M8x60mm TORNILLO M8x60mm</p> <p>Q.TY n.2</p>	 <p>3</p> <p>VITE TEF M8x55mm SCREW M8x55mm VIS M8x55mm SCHRAUBE M8x55mm TORNILLO M8x55mm</p> <p>Q.TY n.2</p>	
 <p>4</p> <p>VITE TCEI M6x35mm SCREW M6x35mm VIS M6x35mm SCHRAUBE M6x35mm TORNILLO M6x35mm</p> <p>Q.TY n.4</p>	 <p>5</p> <p>RONDELLA Ø6mm WASHER Ø6mm RONDELLE Ø6mm SCHEIBE Ø6mm ARANDELA Ø6mm</p> <p>Q.TY n.4</p>	 <p>6</p> <p>RONDELLA Ø6x20mm WASHER Ø6x20mm RONDELLE Ø6x20mm SCHEIBE Ø6x20mm ARANDELA Ø6x20mm</p> <p>Q.TY n.4</p>	
 <p>7</p> <p>GOMMINO Z1822 RUBBER CAOUTCHOUC GUMMI GOMA</p> <p>Q.TY n.4</p>	 <p>8</p> <p>RONDELLA IN GOMMA Z1822 RUBBER WASHER RONDELLE EN GOMME GUMMISCHIBE ARANDELA DE GOMA</p> <p>Q.TY n.4</p>	 <p>9</p> <p>DISTANZIALE Ø11x11mm foro Ø6,5mm V687 SPACER ENTRETOISE DISTANZSTÜCK DISTANCIADOR</p> <p>Q.TY n. 4</p>	
 <p>10</p> <p>DISTANZIALE Ø16x32mm foro Ø8,5mm V696 SPACER ENTRETOISE DISTANZSTÜCK DISTANCIADOR</p> <p>Q.TY n. 2</p>	 <p>11</p> <p>PIASTRA MONOKEY Z622M PLATE PLATINE PLATTE PARRILLA</p> <p>Q.TY n.1</p>	 <p>12</p> <p>DADO A.B. M6 FLANGIATO BOLT M6 ECROU M6 MUTTER M6 TUERCA M6</p> <p>Q.TY n.4</p>	 <p>13</p> <p>COPRIFORO Z621 BOLT CAP CACHE TROU STOPLOCK TAPA AGUJERO</p> <p>Q.TY n.6</p>

