
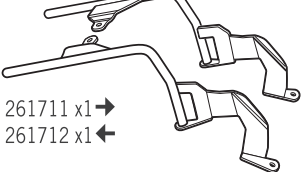











SHAD

BMW F800 R/S '09-
WOFR89iF

3P
SYSTEM

DESIGNED IN
BARCELONA

- | | | | | | |
|--|---|---|--|--|---|
| 
1 304066 x2
M8 x 50 DIN 912 | 
2 261711 x1 →
261712 x1 ← | 
3 202478 x2 | 
4 261672 x4
Ø18 Ø12 Ø7 x 7,5-2 | 
5 304057 x4
M6 x 25 DIN 912 | 
6 303000 x4
Ø6 |
| 
7 303020 x6
Ø8 | 
8 304036 x4
M8 x 45 DIN 7380 | 
9 260648 x2
Ø16 Ø9 x 5 | 
10 303045 x 2
Ø8 | 
11 302024 x2
M8 | |

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos del todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

