


SHAD

YAMAHA FZ8 '10 '11
YOFZ80IF

3P
SYSTEM

DESIGNED IN
BARCELONA




1 261721 x 1



2 303020 x10
Ø8




3 304077 x8
M8 x 30 Din 912

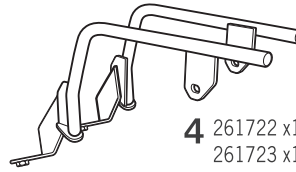

4 261722 x1 →
261723 x1 ←



5 202478 x2



6 261724 x2



7 261672 x4
Ø18 Ø12 Ø7 x 7,5-2



8 304079 x4
M6 x 30 Din 7380



9 303000 x4
Ø6



10 260648 x4
Ø16 Ø9 x 5



11 260918 x2



12 303027 x2
Ø8



13 304069 x2
M6 x 55 Din 7380



14 303025 x2
Ø10



15 304051 x2
M10 x 25 Din 7380



16 303045 x2
Ø8



17 260695 x4

! WARNING!

(GB)

Do not fully tighten the screws until it is ensured that the KIT is correctly attached and aligned.

(E)

No apretar los tornillos de todo hasta asegurarse que el KIT está correctamente colocado y alineado.

(D)

Ziehen Sie die Schrauben nicht ganz fest, bevor Sie sich nicht vergewissert haben, daß der Bausatz korrekt eingestellt und ausgerichtet ist.

(I)

Non stringere del tutto le viti fin tanto non si è sicuri che il kit è collocato correttamente e allineato.

(F)

Ne pas serrer les vis avant d'être sûr que le KIT est correctement monté et ajusté.

