

## MOUNTING PROCEDURE


KIT SAVE CARTER  
HONDA HORNET 600 '02 - '06

**HN6101**

WWW.BARRACUDAMOTO.COM

## KIT

- X2. PVC HEAD
- X2. SAVE CARTER BASE
- X1. SPACER
- X1. BOLT 10X90
- X1. BOLT 10X110

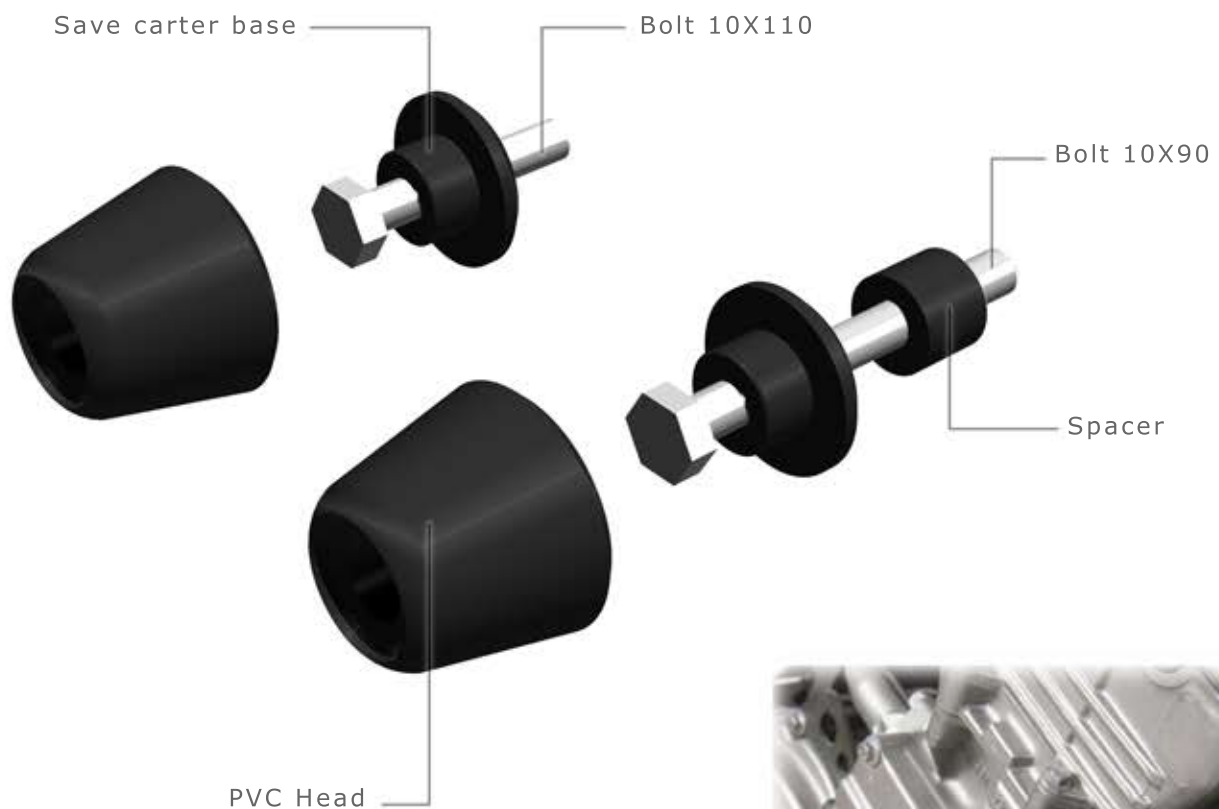

SEARCH AND FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START TO MOUNTAIN, USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED IN THE PICTURE (SO YOU CAN GET THE RIGHT PROMINENCE FROM THE MOTORBIKE).  
FIX THE PVC HEAD AFTER FIXED AND TIGHTEN ALL THE KIT ONLY