

MOUNTING PROCEDURE


KIT SAVE CARTER KAWASAKI Z-750 '03 - '06

KN7101

WWW.BARRACUDAMOTO.COM

KIT

- X2. PVC HEAD
- X2. SAVE CARTER BASE
- X1. THICKNESS 100 MM
- X1. THICKNESS 111 MM
- X1. SCREW 10X190
- X1. SCREW 10X200
- X2. NUT Ø 10
- X2. WASHER Ø 10

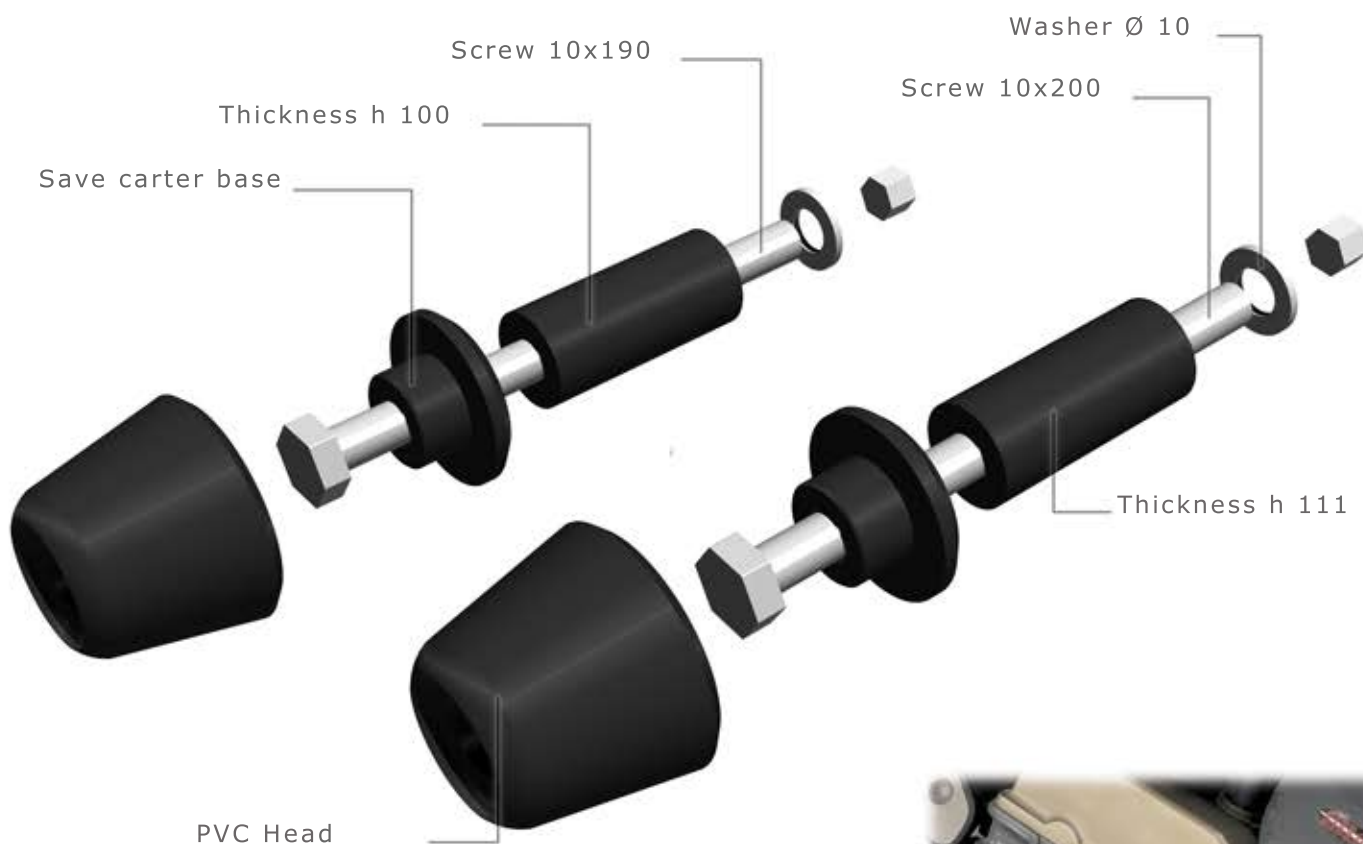

FIXING POINT ON BIKE



FIND THE FIXING POINT ON THE MOTORBIKE BEFORE START THE MOUNTING PROCEDURE.
USE THE SPECIFIC THICKNESS AND BOLTS LIKE DESCRIBED INTO THE PICTURE TO OBTAIN THE RIGHT DISTANCE OF THE SAVE CARTER FROM THE MOTORBIKE.
FIX THE PVC HEAD OF SAVE CARTER ONLY AFTER FIX AND LOCK ALL THE KIT.