





MODEL DUCATI MULTISTRADA 1200

YEAR 2010-->

LINE SPORT

MUFFLER ELIMINA KAT - D.027.C3

SCHEMATIC

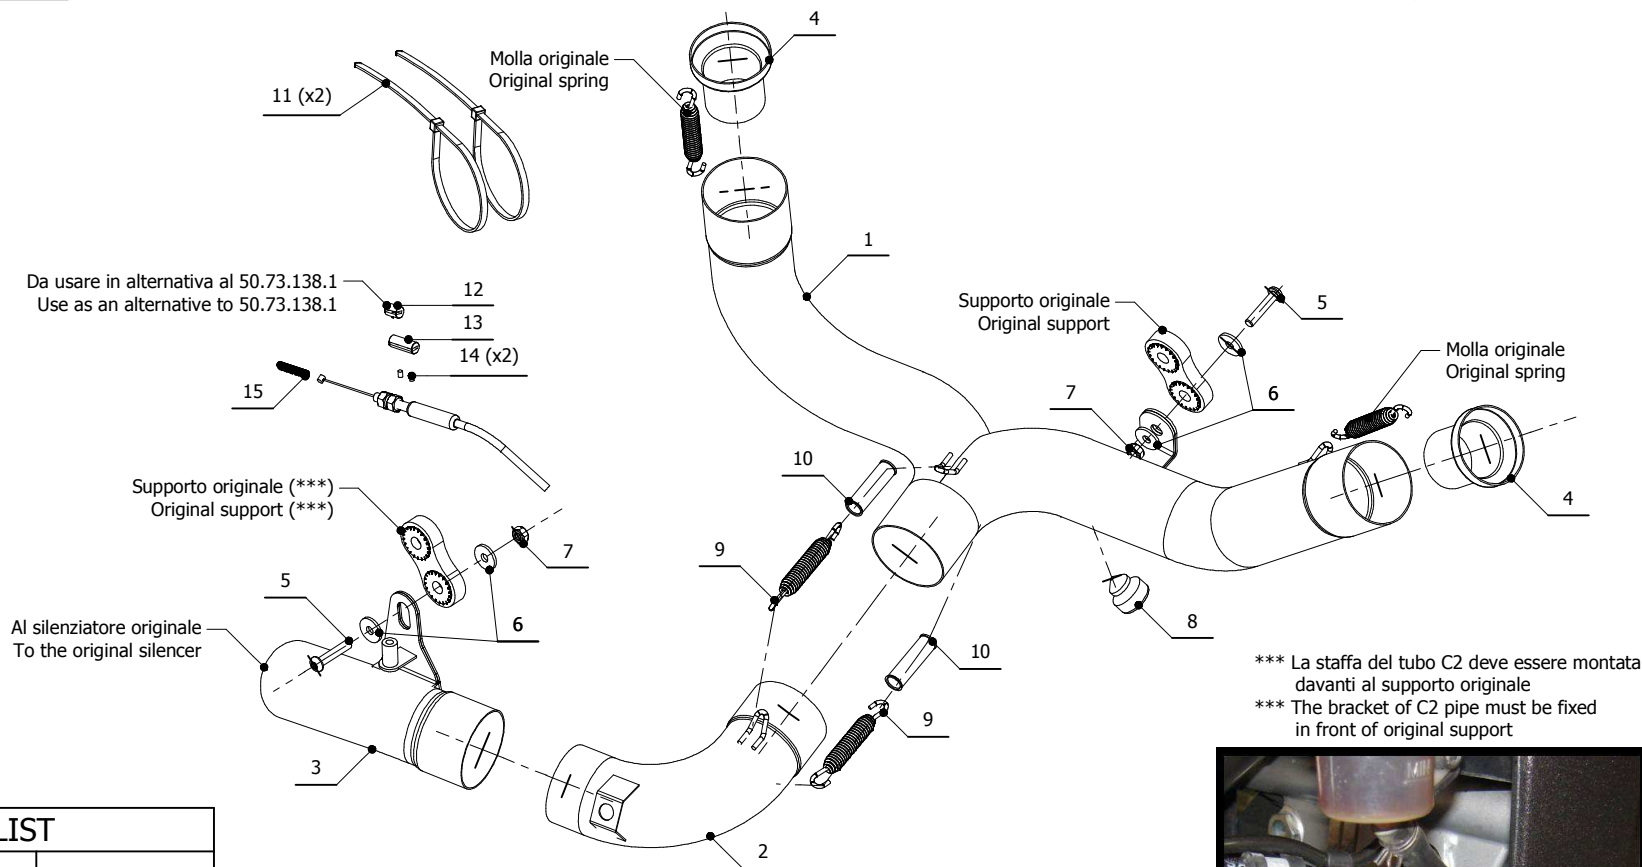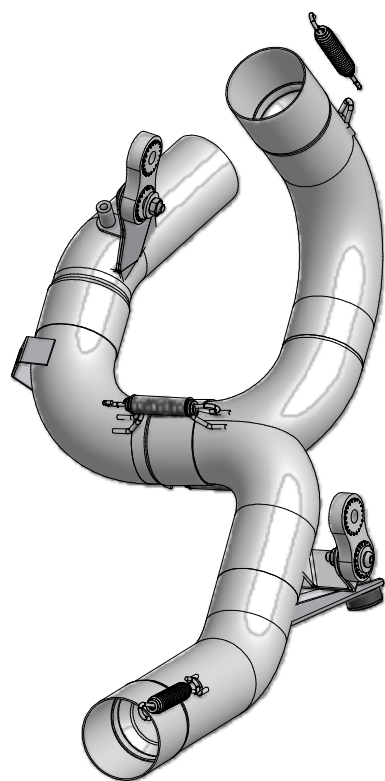

ELENCO PARTI / PARTS LIST

#	QTÀ / QTY	DESCRIZIONE / DESCRIPTION	CODICE / CODE
1	1	Tubo elimina Kat / Pipe no Kat	9773D027C1A
2	1	Tubo elimina Kat / Pipe no Kat	9773D027C1B
3	1	Tubo di raccordo / Link pipe	9773D027C2
4	2	DB killer / DB killer	50.DK.065.0
5	2	Vite M6x30 / Screw M6x30	50.73.471.1
6	4	Rondella M6 / Washer M6	50.73.187.1
7	2	Dado M6 autobloccante / M6 locknut	50.73.112.1
8	1	Gommino paracolpi / Rubber buffer	50.72.010.1
9	2	Molla media / Middle spring	50.73.359.1
10	2	Tubo in gomma / Rubber pipe	50.73.210.1
11	2	Fascetta in nylon / Nylon clamp	50.73.361.1
12	1	Morsetto in alluminio / Aluminium clamp	50.73.139.1
13	1	Morsetto in alluminio / Aluminium clamp	50.73.138.1
14	2	Grani M3 / Grub screws M3	50.73.140.1
15	1	Molla / Spring	50.73.142.1

ASSEMBLAGGIO CAVO DELLA VALVOLA A FARFALLA:

- 1) Svitare i 2 dadi (10mm) sul cavo del catalizzatore originale ed estrarre il cavo della valvola a farfalla dalla sua sede.
- 2) Prendere la molla e inserire le prime spire sul cavo d'acciaio di comando della valvola a farfalla.
- 3) Ruotando la molla , essa si avvolgerà completamente al cavo d'acciaio.
- 4) Quando la molla e' ben inserita sul cavo d'acciaio montare il distanziale per fine corsa valvola e serrare i grani.
- 5) Fissare il cavo sul telaio con una fascetta.

THROTTLE CABLE ASSEMBLY:

- 1) Unscrew the 2 nuts (10 mm) on the cable of the original catalyst, and remove the throttle cable from its seat.
- 2) Take the spring and enter the first coil on the steel cable throttle valve control.
- 3) Turning the spring, it will completely wrap the steel cable.
- 4) When the spring is correctly mounted on the steel cable, assemble the aluminium clamp and tighten the grub screws.
- 5) Secure the cable with a clamp on the frame.

